



3 4 5 6 7 8


2 1

ALL

F1FRV / F1CXX


**GROUPEMENTS
D'ANTENNES**

A black rotary knob with a silver-colored tip, used for selecting antenna groups. The knob is currently positioned between the '1' and '2' markings.

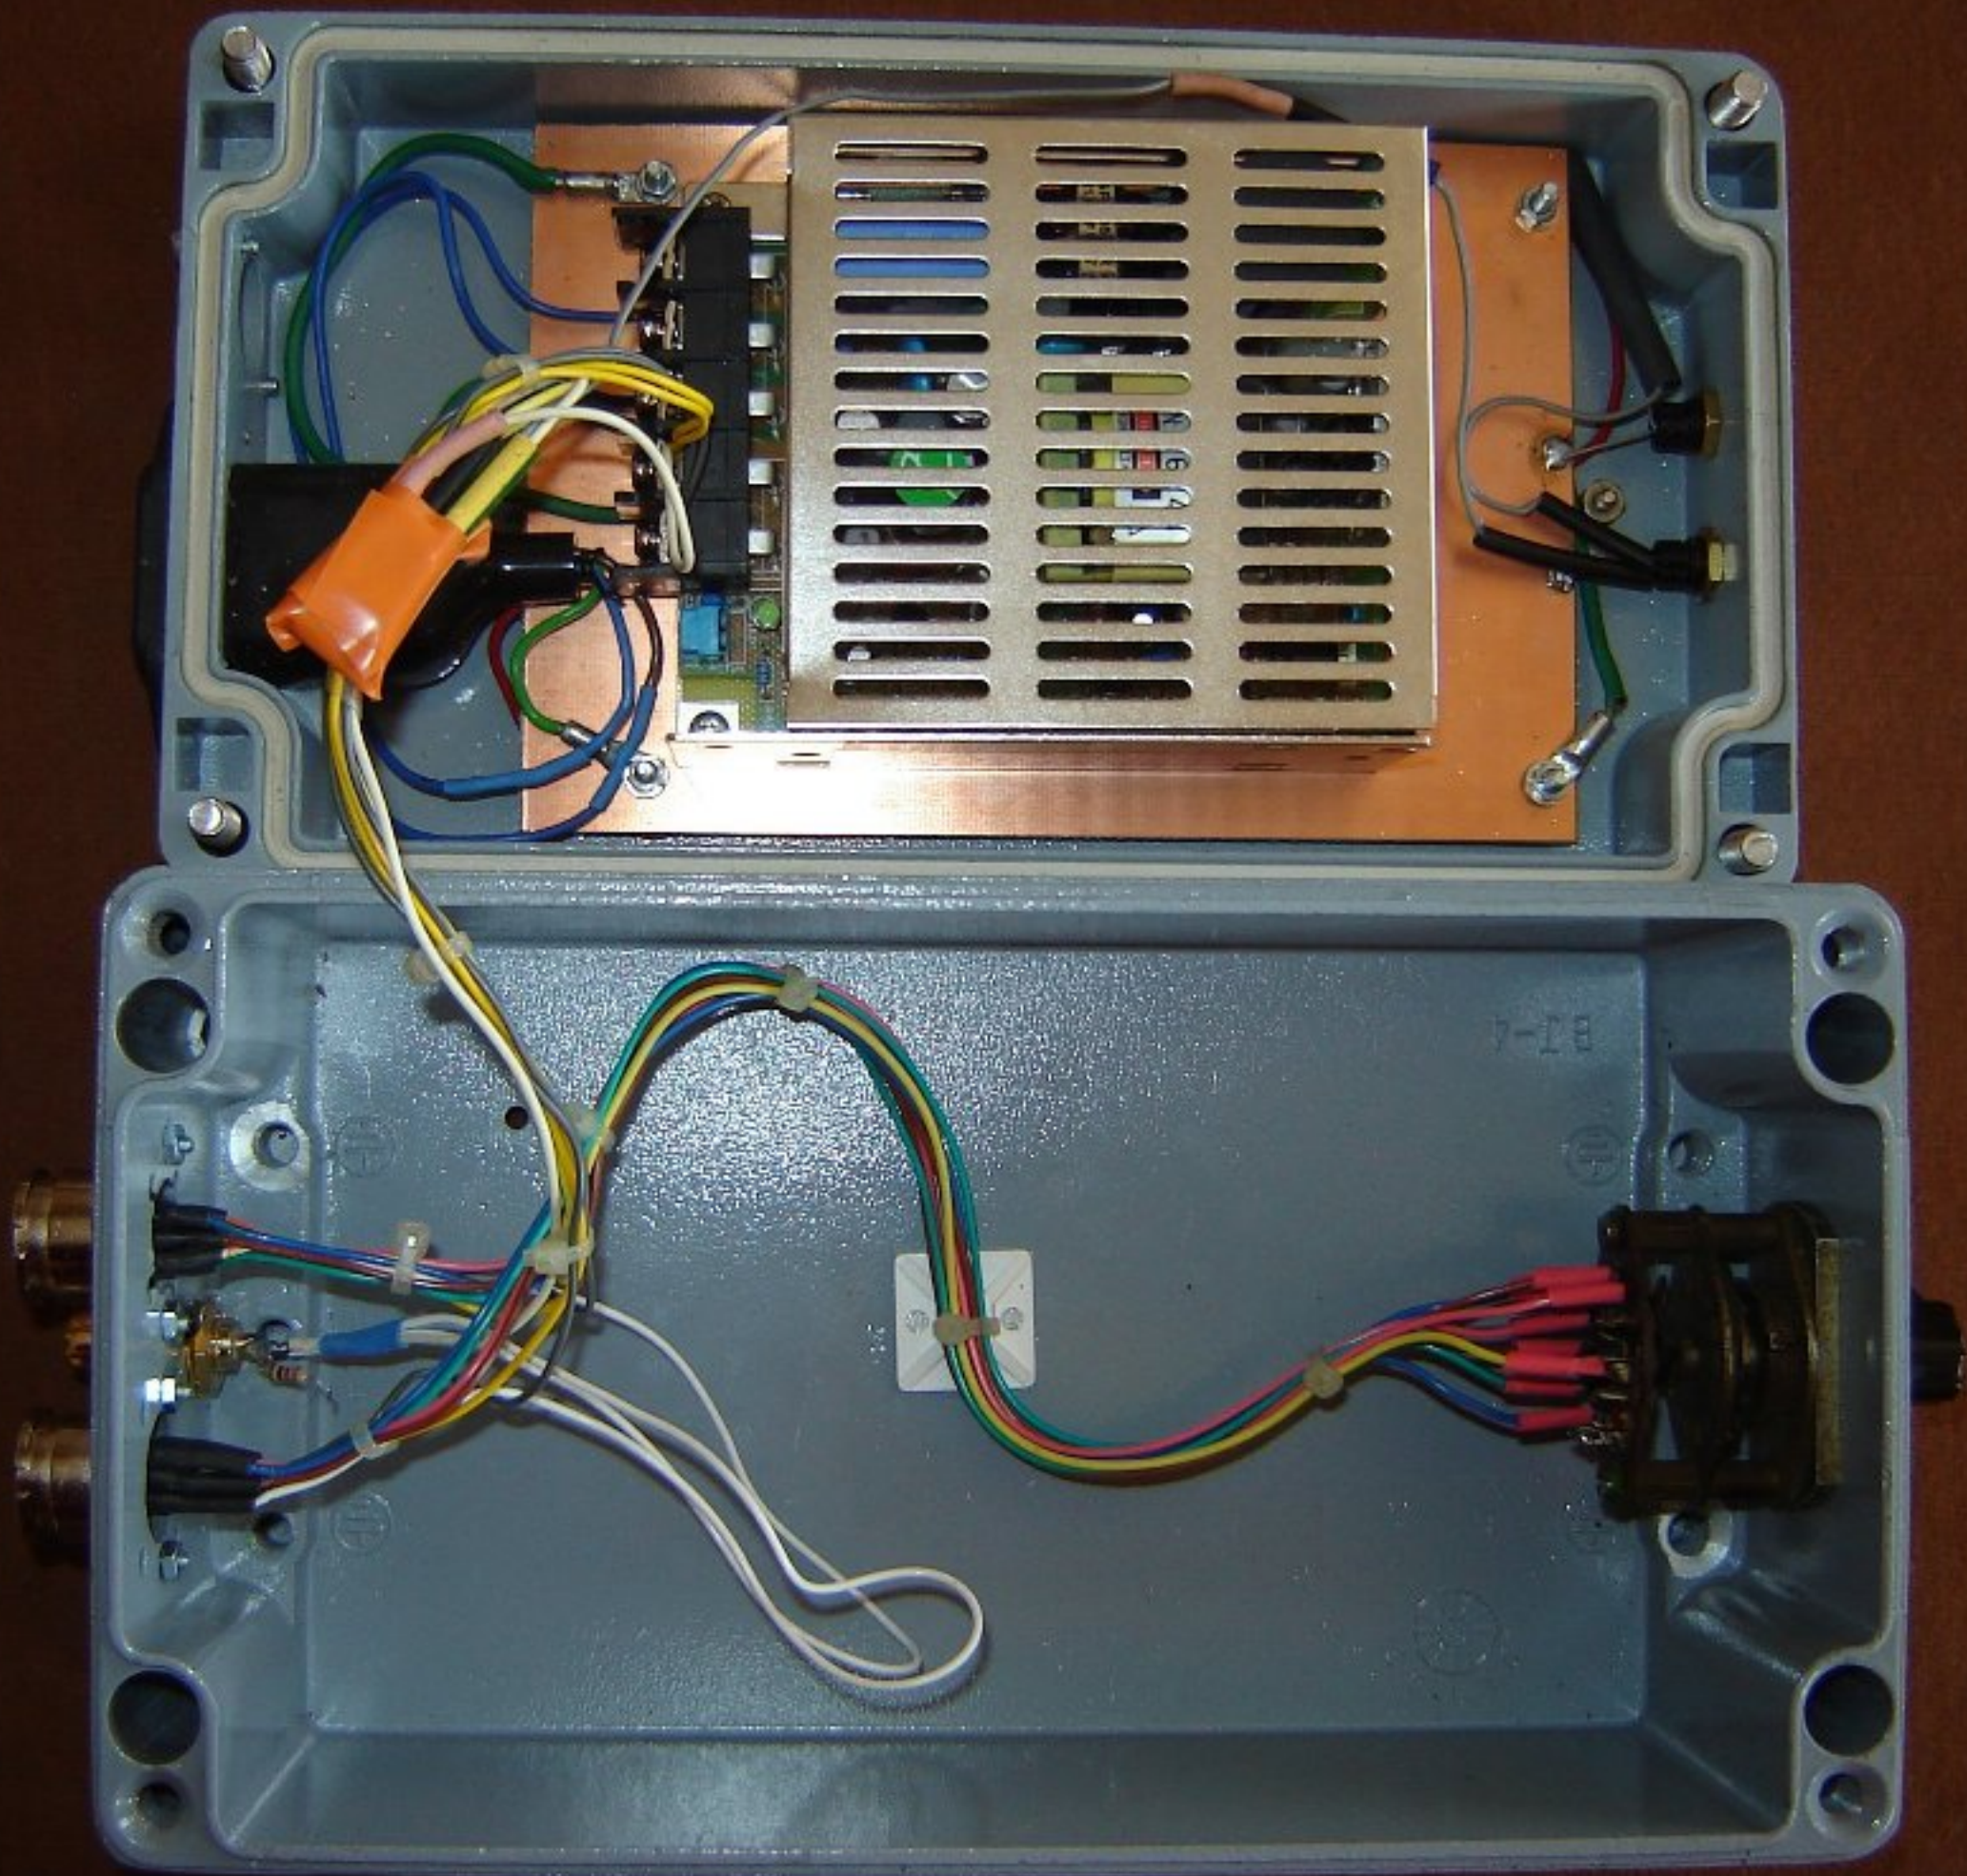



3 4 5 6 7 8
2
1
ALL ALL
FIFTEEN
GROUPMENTS
D'ANTENNES

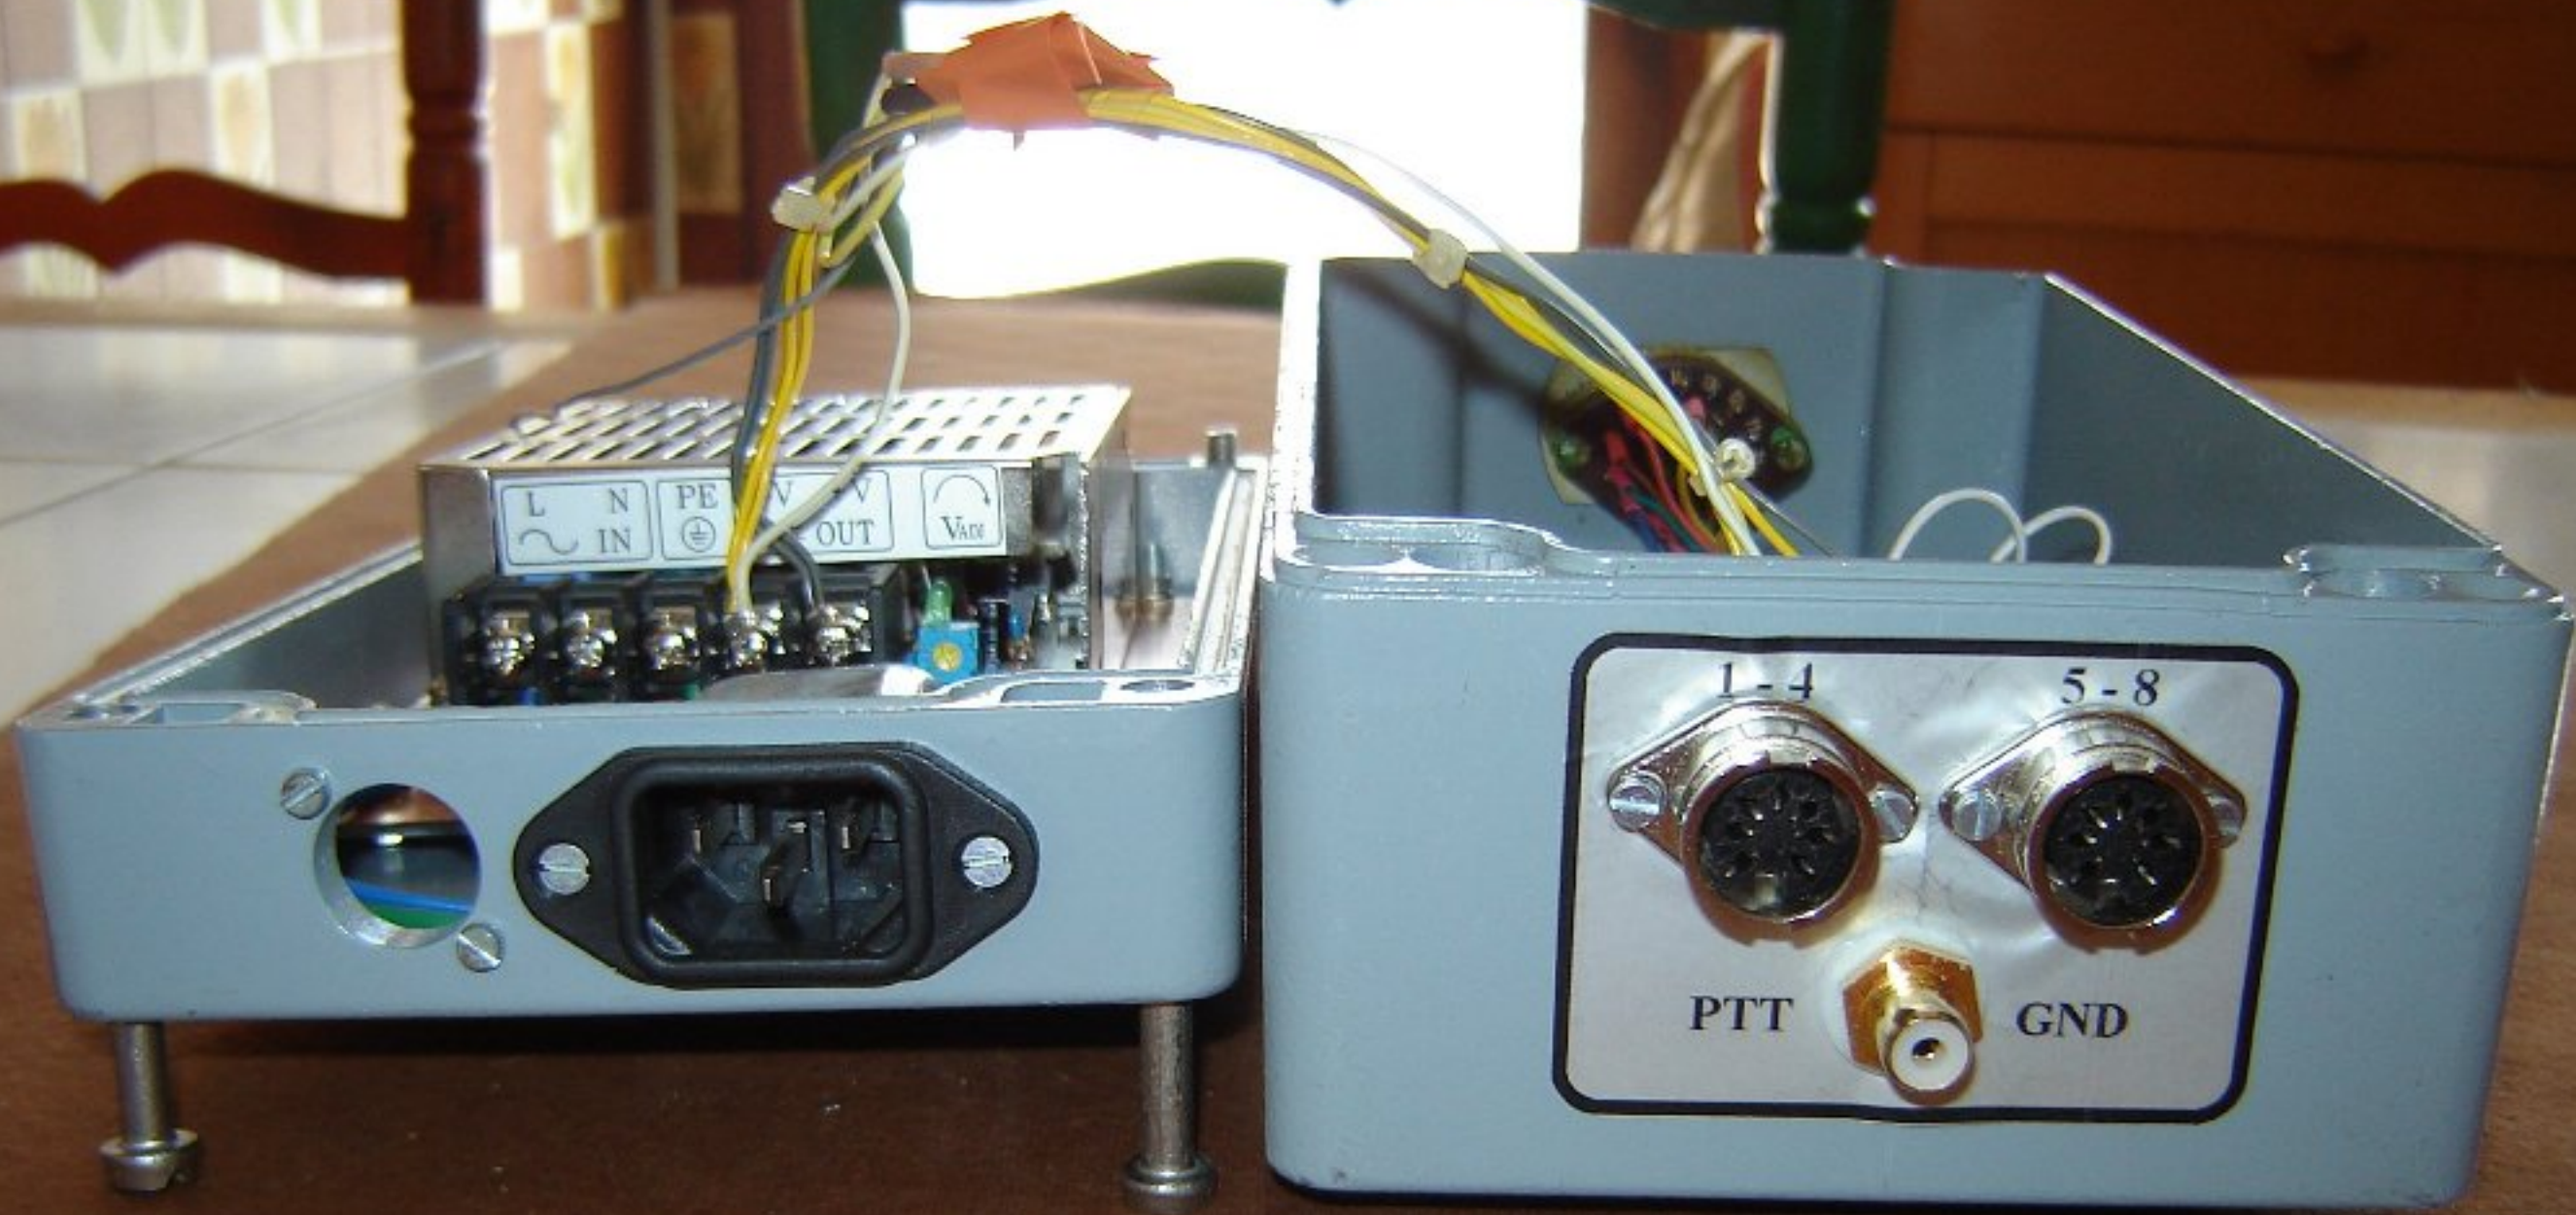

L N PE
IN IN ⊕
V V OUT
Vout

1-4 5-8
PTT GND